



File Name: bose wireless speaker owner s manual.pdf

Size: 1846 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 18 May 2019, 16:32 PM

Rating: 4.6/5 from 812 votes.

Status: AVAILABLE

Last checked: 7 Minutes ago!

In order to read or download bose wireless speaker owner s manual ebook, you need to create a FREE account.

[**Download Now!**](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with bose wireless speaker owner s manual . To get started finding bose wireless speaker owner s manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

bose wireless speaker owner s manual

Important Safety Instructions. Please take the time to carefully read and follow these Important Safety Instructions and keep for The lightning flash with arrowhead symbol within an equilateral triangle alerts the user to the presence of uninsulated, The exclamation point within an equilateral triangle alerts the user to the presence of important operating and maintenance Exposure to liquids may. This product contains magnetic material. Contact your physician if you have questions on whether this might affect the Contains small parts which may be a choking hazard. Not suitable for children under age 3. If contact has been made, wash Bose Corporation hereby declares that this product is in compliance with the essential requirements and other. The complete Keep these instructions. Heed all warnings. Follow all instructions. Do not use this apparatus near water. Clean only with a dry cloth. Servicing is required when the apparatus has been damaged in No part of this work may be reproduced, modified, distributed, or otherwise used Information about products that generate electrical noise However, this is no guarantee that interference will not occur in a If this equipment does cause harmful interference to radio or television reception, which can be determined Changes or modifications not expressly approved by Bose Corporation could void the user's authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions 1 This device may In Canada. This device complies with FCC and Industry Canada RF radiation exposure limits set forth for general population. It must not be This device complies with Industry Canada licence exempt RSS standards. Operation is subject to the following two conditions Please complete and retain for your records. The serial number and model number are located on the bottom of the speaker. We suggest you keep your receipt with this owner's guide. English 3 Thank you. 6. Features. 6. Unpacking. <http://manegedebuitenwijck.nl/uploads/condor-wisc-manual.xml>

- **bose wireless speaker owner s manual, bose wireless speaker owner s manual software, bose wireless speaker owner s manual pdf, bose wireless speaker owner s manual download, bose wireless speaker owner s manual free.**

7. Connecting to AC power. 8. Selecting a language for the voice prompts. 9. Turning voice prompts off. 9. Changing the language. 9. Pairing the first mobile device to the speaker. 10. Pairing another mobile device. 10. Playing music. 11. Connecting a previously paired mobile device. 11. Speaker Memory. 11. Clearing the speaker memory. 11. Speaker controls. 12. System status indicators. 12. Connecting an AUX device. 13. Operating on battery power. 14. Checking the battery. 14. Charging the battery. 14. Battery protection mode. 14. Tips on placing the speaker. 14. Troubleshooting. 15. Replacing the battery. 16. Cleaning. 16. Contacting Customer Service. 16. Limited Warranty. 16. Technical Information. 17. English 5 Thank you. Enjoy music wirelessly from your smartphone, tablet, laptop, or other Bluetooth Features Unpacking Be sure to save all packing materials. They Contact your authorized Bose dealer immediately or call Bose Customer Service. For contact information, visit owners.Bose.com. AC power supply. Power supply cord USB. Adapters Included only in certain regions. English 7 Connecting to AC power. Before using your speaker, connect it to power and charge the battery. Allow You can use the speaker while it is charging. If needed, snap on the adapter for your The battery indicator glows amber. For fastest charging time, use the USB Selecting a language for the voice prompts. The speaker features voice prompts to guide you through the pairing and The voice prompts also indicate the battery charge level The first time you use your speaker, you will need to select a language Press English, Spanish, French, German, Mandarin, Japanese, Italian. Portuguese, Dutch, Russian, Polish Turning voice prompts off. If you prefer not to

hear voice prompts, press and hold Repeat to turn voice prompts back on. Changing the language. <http://accuratesearch.com/userfiles/condor-t60-manual.xml>

To change the selected language English 9 Pairing the first mobile device to the speaker The Bluetooth indicator blinks blue, and the voice prompt says, "Ready to pair". The Bluetooth indicator glows solid white and the voice prompt says, Note Some devices may require a passcode. Enter 0000 if prompted. Settings. Bluetooth. Bluetooth Bose Color SoundLink Connected. Pairing another mobile device The Bluetooth indicator glows solid white and the voice prompt says, Note Some devices may require a passcode. See "Speaker Memory" on page 11 for more details. Playing music. Once your mobile device is connected, start a music app on your mobile device Connecting a previously paired mobile device. Turn on the speaker and the device. Press The Bluetooth indicator on the speaker blinks white. Bluetooth indicator glows solid white and the voice prompt says, Speaker Memory. The speaker can hold up to eight paired devices in its memory. If you pair a ninth When you turn on the speaker, it will connect with the most recently connected Clearing the speaker memory. To clear the speaker memory of all devices, press and hold English 11 Speaker controls. The control buttons are located on the top of the speaker. Press again within 3 seconds to connect with the next paired device. Press to select the AUX source. System status indicators. The system status indicators are located on the top of the speaker, above the While charging. While playing. White when AUX is the selected source. Connecting an AUX device This feature This type of cable is To use the AUX connector English 13 Operating on battery power. Battery performance varies with the content played and loudness at which it is Checking the battery. Each time you turn the speaker on, the voice prompt will indicate the battery The battery indicator also displays the battery level. Green. High charge level 70% or more of full charge. Amber. Medium charge level 20% to 70% of full charge. Red. Low charge level less than 20% of full charge.

Charging the battery. The battery status indicator on the speaker blinks red when the battery needs To charge the battery, connect the speaker to AC power. See "Connecting to AC The speaker emits a tone to confirm the power connection. Recommended The battery status indicator See "System status indicators" on page 12. Battery protection mode. When the speaker is unplugged and unused for more than 24 days, it enters To reactivate the speaker, Tips on placing the speaker When using your speaker outdoors, you should expect the sound quality to change Keep the following guidelines in mind when placing your speaker. If you move the device farther Troubleshooting. Problem. What to do. Speaker does not Speaker does not Press again within 3. Press Make sure that. Bose Color SoundLink is selected in the Bluetooth device list. Then try pairing the speaker to the mobile device again. No sound or poor No audio from the. AUX source English 15 Replacing the battery. The battery should be replaced when. Only use Bose authorized batteries. For replacement batteries, visit Cleaning. To clean the exterior surface of your product, you can wipe it using a soft, dry Contacting Customer Service Limited Warranty Technical Information. Temperature range. Operating time. Up to 6 hours. Bluetooth range Power supply rating. Output 5VDC, 1.0A Max. Input power rating. Input 5VDC, 1.0A Max. Dimensions. Weight English 17 Framingham, MA 017019168 USA. AMXXXXXX Rev. 00 PDF Version 1.5. Linearized No. Create Date 20140328 1645270400. Metadata Date 20140328 1646350400. Modify Date 20140328 1646350400. Creator Tool Adobe InDesign CS5 7.0. Page Image Page Number 1, 2. Page Image Format JPEG, JPEG. Page Image Width 256, 256. Page Image Height 256, 256. Page Image Binary data 6071 bytes, use b option to extract, Binary data 8330 bytes, use b option to extract. Instance ID uuid73d093ac262b4a97b76adc0dd884d29c. Document ID xmp.did632CEADDFB94E3118D7FC14BE33C1A1A. Original Document ID xmp.did5D90A09FFF3FE311B425B0109EA38293.

Rendition Class proofpdf. Derived From Instance ID xmp.iidCC32A996F294E3118D7FC14BE33C1A1A. Derived From Document ID

xmp.did:AE0EE4839350E3118DC9C6574B0A59AB. Derived From Original Document ID xmp.did:5D90A09FFF3FE311B425B0109EA38293. Derived From Rendition Class default. Doc Change Count 15141. Producer Adobe PDF Library 9.9. Trapped False. Page Count 19. Creator Adobe InDesign CS5 7.0. Owner's Guide Please read this guide. Please take the time to follow the instructions in this owner's guide carefully. It will help you set up and operate your Please save this guide for future reference. The lightning flash with arrowhead symbol within an equilateral triangle alerts the user to the presence of The exclamation point within an equilateral triangle, as marked on the system, is intended to alert the user As with any electronic products, use care not to spill liquids into any. Always use the correct charger and refer to the If contact has been made, wash the affected area with copious amounts of water Corporation is under license. WiFi is a registered mark of the WiFi Alliance. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permission. WARNING This product contains magnetic material. Please contact your physician if you have any It is neither designed nor tested for use Important Safety Instructions Install in accordance with the manufacturer's instructions. Servicing is required when the apparatus has been damaged in any This device complies with FCC and Industry Canada RF radiation exposure limits set forth for general population. It must not be colocated or operating in conjunction with any other antennas or transmitters. English 3 U.S.A. only. NOTE This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference This equipment generates, uses, and can radiate radio frequency energy and, if not However, there is no guarantee that interference will not occur in a particular installation. If this equipment does Canada. This Class B digital apparatus complies with Canadian ICES003. This device complies with Industry Canada licence exempt RSS standards. Operation is subject to the following Bose Corporation hereby declares that this product is in compliance with the essential requirements and. Names and Contents of Toxic or Hazardous Substances or Elements. Toxic or Hazardous Substances and Elements. Lead. Mercury. Cadmium. Hexavalent. Polybrominated. Polybrominated Diphenyl Ether PBDE. Part Name Pb. PCBs. Metal Plastic Speakers. Cables. O Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is. X Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used. Please complete and retain for your records. The serial and model number can be found on the bottom of the speaker. We suggest you keep your receipt with this owner's guide. Introduction. Overview. Unpacking. Operation. Connecting to AC power. Pairing and connecting a device to the speaker. Firsttime setup. Adding another device to the speaker. Troubleshooting. Overview Features. Bluetooth device. Open the carton and remove the speaker and AC power supply. Depending on These provide the safest. Contact your authorized Bose dealer immediately or call Bose Customer Service. AC power supply. AC power supply Connecting to AC power While the battery is charging, Or, Slide the AC power adapter for your region onto the AC power supply. English 7 The speaker emits a tone to confirm connection to AC power, and c Pairing and connecting a device to the speaker Firsttime setup.

The first time you turn on your speaker, it is ready to pair and connect your On your device, turn Bluetooth on, locate the Bluetooth device list, and select Settings. Bluetooth Bose SLIII. Connected. When pairing is complete and your device is connected to the speaker, the Note If the speaker turns off after five minutes, it has not paired or connected with English 9 Adding another device to the speaker. Pair another device to the speaker by making the speaker discoverable. When the device connects to the speaker, the B Speaker memory. The speaker can remember up to six paired devices. If you pair the speaker with Note To clear the speaker memory of all devices, press and hold Bluetooth All devices are cleared and the Reconnecting a device. When turned on, the speaker attempts to reconnect with a device in memory. If the last connected device is not. The speaker

searches for a paired device for approximately 30 seconds. Switching to a different device. You can switch the speaker from your connected device to another previouslyThe Bluetooth status indicatorOn your device, select "Bose SLIII" from the Bluetooth device list. The Bluetooth status indicator blinks white, while the speaker attempts to connect to the device.Control buttons. Control buttons are located on the top of the speaker. ControlDescription. Press to turn the speaker on or off. If there are no paired devices. See "Pairing and connecting a devicePress to select the Bluetooth source. If there are noPress again toPress to listen to a device plugged into the AUX connector. See "ConnectingPress to decrease the speaker volume incrementally. Press and hold to. Press to increase the speaker volume incrementally. English 11System status indicators. Status indicators illuminate to show when an audio source or speaker state is. StatusSystem statusBlinks as the volume of the speaker increases or decreases when. When the indicator blinks twice, the maximum orBlinks when the sound is muted.

Indicates the battery power level or the battery charging state. See "CheckingConnecting a device using the AUX connectorTo use the AUX IN connectorNotes. It cannot be used to connect an audio device. English 13Operating on battery power. Battery performance varies with the content played and the loudness at whichChecking the battery. When the speaker is turned on, the battery status indicator briefly illuminates, thenHowever, if the battery requires charging, theTo check the battery charge level, press and hold PowerSolid green. Full charge. Solid yellow. Medium charge. Blinking red. Charging is neededCharging the batteryTo charge the battery, connect the speaker to AC power see "Connecting to ACRecommended charging time is three hours to fully charge the battery. The bYou can use the speaker whileBlinking yellow. Battery is charging. Solid green. Battery is fully charged. When the speaker is unplugged and unused for more than 24 days, it enters. To reactivate the speaker,Tips on placing the speaker. When using your speaker indoors, the tonal quality can vary depending on whereFollow these guidelines when placing your speakerBass response decreases as the speaker isDo not lay the speaker on its back. Sound is emittedEnglish 15Troubleshooting. Speaker willIf using AC power, ensureIf using battery power, the battery may be in protection mode or discharged. ConnectCannot pairSee "Pairing and connecting a device to the speaker" on page 9.Try moving it closer to the speaker.You may need to play an audio track to finalize theSee "Firsttime setup" on page 9 and "Adding another device" on page 10. Turn the speaker onPaired. See "Pairing and connecting a device to the speaker" on page 9. Try moving it closer to the speaker.See "Reconnecting a device" on page 10.Turn the speaker onPair and connect the device to the speaker again. See "Speaker memory" on page 10 and "Firsttime setup" on page 9.Problem. The speakerTry moving it closer to the speaker.

Turn the speaker onPoor soundConnect your Bluetooth device to the speaker using the AUX connection. If soundTry moving it closer to the speaker.Running multiple. Pair your device and the speaker again.Turn the speaker onNo audio orEnglish 17Replacing the battery. Only Bose can replace the battery in your speaker. If you need a new battery. For contactTo clean the exterior surface of your product, wipe it using a soft, dry cloth. Contacting customer serviceLimited warranty. Refer to the card for instructions on how to register. Failure to register will not affect your limited warranty rights. Technical information. AC power supply rating. Output 17 VDC, 1A Max. Input 17 20 VDC, 1A Max. WeightTemperature range for useFramingham, MA 017019168Weekdays 830 a.m. to 8 p.m. Saturdays 9 a.m. to 3 p.m.Canada. Bose LimitedMarkham, Ontario. Canada L6C 3A1Weekdays 9 a.m. to 5 p.m.Australia. Newington NSW 2127Bose N.V., Limesweg 2. B3700 TongerenChina. Bose Greater China OperationsEast Dong Baoxing Road. Shanghai 200080 P.R.C. People's Republic of ChinaDeutschland. Bose GmbH. Kundenbetreuung. Neuenhauser Str. 73. D48527 NordhornFinland. Bose Finland. Kornetintie 6BFrance. Bose S.A.S.Hong Kong. Nederland. Bose B.V. Nijverheidstraat 8Suite 1203, Midas Plaza, 1 Iai. Yau Street, San Po Kong. Kowloon, Hong KongIndia. Kongsvinger FestningBose Corporation India Private Limited. The Bose Service Centre. C13, Ground Floor. SDA Commercial Complex. Community Centre. New Delhi, India 110016Bose

SMS Ltd. Castleblayney Road. Carrickmacross, Co Monaghan
Italia. Bose S.p.A. Via della Magliana 876
Japan. Bose K.K. Sumitomo Fudosan Shibuya. Garden Tower 5F, Shibuyaku, Tokyo 1500036
Luxemburg. Bose N.V. Limesweg 2. B3700 Tongeren
Mexico. Bose de Mexico S. de R.L. de C.V. Despacho 204. Lomas de Chapultepec. C.P. 11000, Mexico D.F., Mexico
Norge. Poland. Bose sp. z o.o.
Osterreich. Bose Ges.m.b.H. Vienna Business Park. Wienerbergstrasse 7 10. OG. A1100 Vienna
Schweiz. Bose AG. Hauptstrasse 134
Sverige.

Johannefredsgatan 4. S43153 Molndal. United Kingdom. Bose Limited
Gillingham Business Park. Gillingham, Kent ME8 ONJ
World Wide Web
English 19. Framingham, MA 017019168 USA.
AM373985 Rev. 00
PDF Version 1.4. Linearized Yes. Create Date 20130603 0933590400. Metadata Date 20130603 0934120400. Modify Date 20130603 0934120400. Creator Tool Adobe InDesign CS5.5 7.5. Page Image Binary data 5553 bytes, use b option to extract, Binary data 7785 bytes, use b option to extract.